


Monoblock Refrigerator System TKT 80 – R 452A

Deep Freezer - Ceiling Design

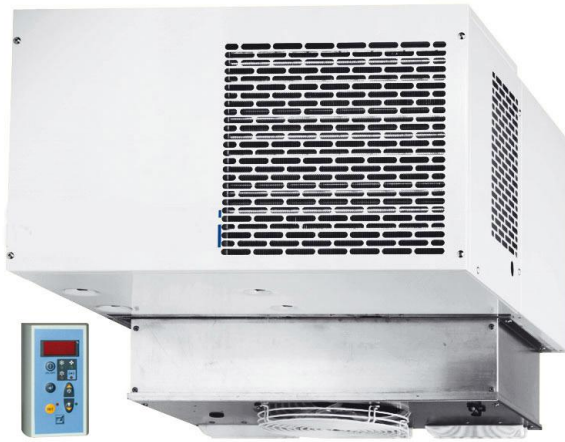

Connector-ready cooling unit, which is ready for immediate use. Mounted directly on top of the morgue. The units have a sturdy housing with low-noise emittance, are fully thermal, and equipped with an air-cooled compressor. The safety utilities are in accordance with EN (DIN) standards, VDE regulations and VBG guidelines. Also included is a high-capacity evaporator with automatic defrosting, an electrical temperature regulation, and a digital temperature indicator with connection and protective plug.

Refrigerant: R 452A

Ambient temperature +5 °C up to +45 °C

Technical data:

Temperature range:	-15 °C to -25 °C
Voltage:	230 V / 1 Ph / 50 Hz
Refrigeration capacity 0 °C inside +40 °C outside:	985 Watt
Rated Input (when normally running):	1000 Watt
Rated Input:	6 Amp
Peak current:	43 Amp
Max current:	11.3 Amp
Defrost:	Hot gas defrosting
Weight:	68 kg

Compressor:

Type:	Hermetic
Normal power:	1300 Watt

Condenser:

Air flow:	750 m ³ /h
-----------	-----------------------

Evaporator:

Air flow:	550 m ³ /h
Air throw:	4 m (Standard)
Dimensions W/D/H:	620 x 719 x 357 mm
Dimensions Opening L/W:	550 x 337 mm
Type:	TKT 80 – R 452A
Article-No.:	040.100.130

KUGEL medical GmbH & Co. KG
Hermann-Köhl-Str. 2A
DE – 93049 Regensburg / Germany

Phone +49/941/208648-0
Fax +49/941/208648-29
www.KUGEL-medical.de



KUGEL
medical
■ ■ ■ ■