

Transport Truck TW 52/100



The Transport truck TW 52/100 has a rugged, torsion-resistant frame structure of stainless steel profiles. 4 solid rubber wheels, 2 of them lockable, diameter 125 mm with special roller bearings, permanently lubricated and maintenance-free, ensure an absolutely noiseless movement. A stainless steel roller track comprising 5 carrying rollers of corrosion-resistant material and noise-absorbing plastic coating has been arranged on top of the truck. A holding device at the roller track secures the body tray lying on it.

Technical Data:

Dimensions W/D/H:	2080 x 540 x 650 mm
Carrying capacity:	max. 200 kg
Dead weight:	approx. 50 kg
Material:	Stainless steel (Material No. 1.4301 – ANSI 304)
Type:	TW 52/100
Article No.:	050.150.010

Additional models see back page


KUGEL medical GmbH & Co. KG
Hermann-Köhl-Str. 2A
DE - 93049 Regensburg/Germany

Phone +49/941/20 86 48-0
Fax +49/941/20 86 48-29
www.KUGEL-medical.de



Transport Truck TW 52/100

Made of Steel

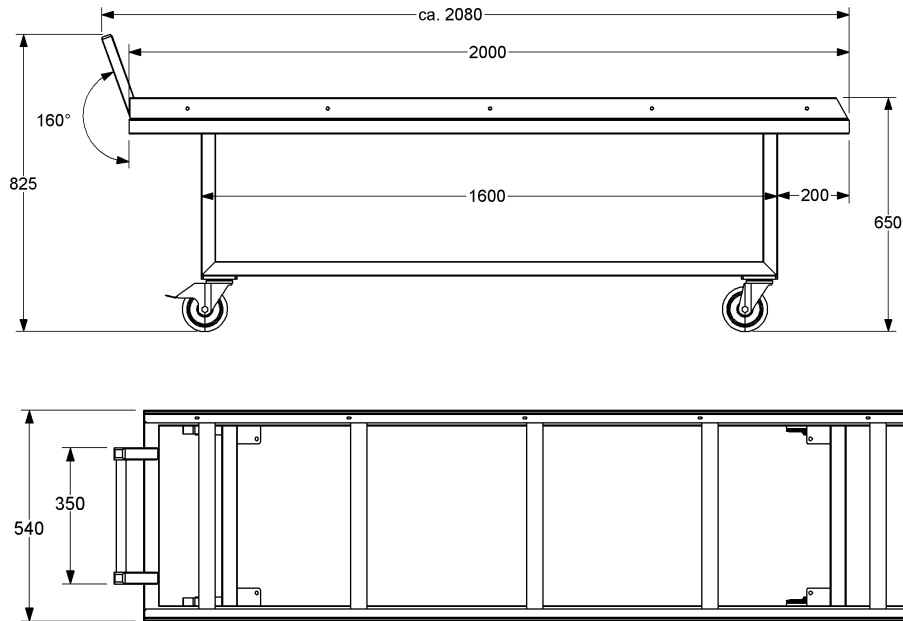

The Transport truck TW 52/100 has a rugged, torsion-resistant frame structure of steel profiles, grey powder coated. 4 solid rubber wheels, 2 of them lockable, diameter 125 mm with special roller bearings, permanently lubricated and maintenance-free, ensure an absolutely noiseless movement. A stainless steel roller track comprising 5 carrying rollers of corrosion-resistant material and noise-absorbing plastic coating has been arranged on top of the truck. A holding device at the roller track secures the body tray lying on it.

Technical Data:

Dimensions W/D/H:	2080 x 540 x 650 mm
Carrying capacity:	max. 200 kg
Dead weight:	ca. 50 kg
Material:	Steel
Colour:	Lightgrey RAL 7035 (powder coated)
Type:	TW 52/200
Article No.:	050.150.030

KUGEL medical GmbH & Co. KG
Hermann-Köhl-Str. 2A
DE - 93049 Regensburg/Germany

Phone +49/941/20 86 48-0
Fax +49/941/20 86 48-29
www.KUGEL-medical.de

